



Sega Genesis Outer Case Replacement

Written By: Erik Bjornstrom




INTRODUCTION

This repair guide will take you through all the steps for removing the outer case of the Sega Genesis.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

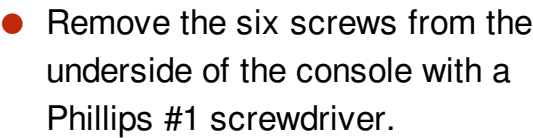

Step 2




Step 3

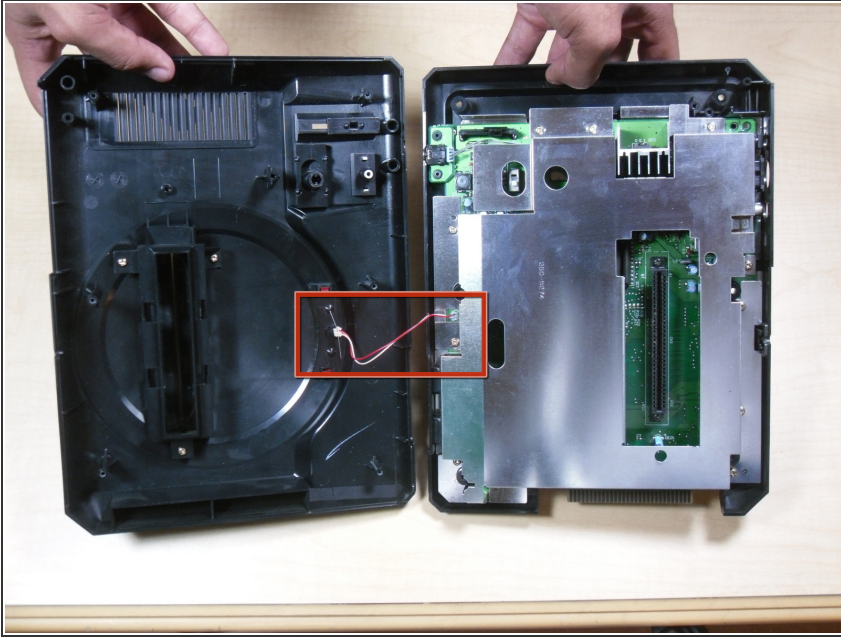

- Gently lift the top casing.


⚠ Note: the case will be connected to the main board by LED wires.

Step 4

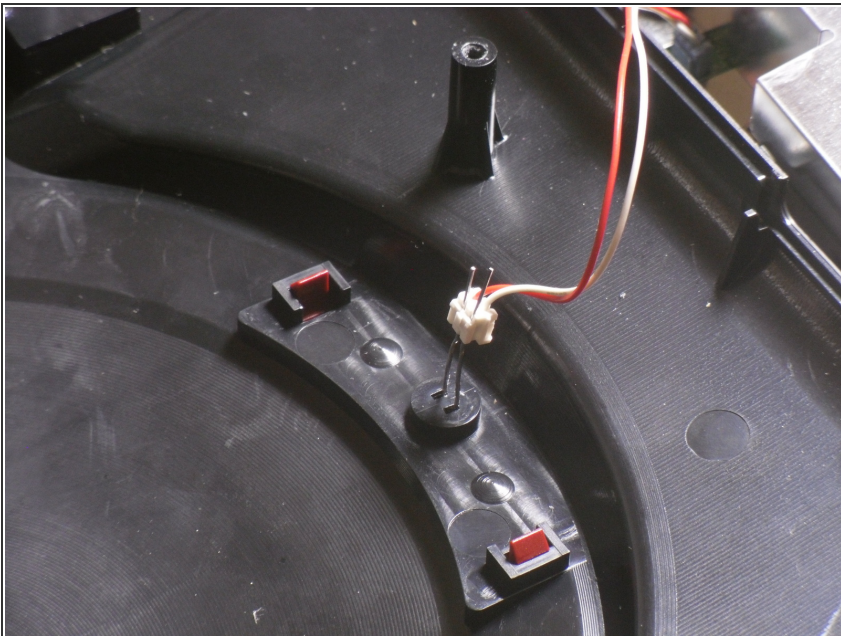


- Bend out the LED leads into vertical positions.

Step 5

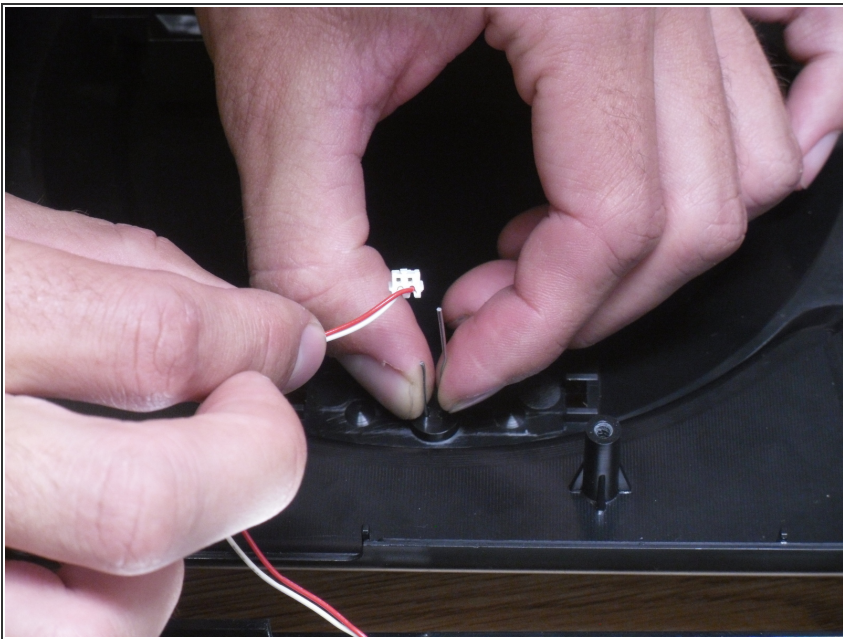

- Slide the LED wire apparatus off the lead pins.

 **Note: observe which color wire corresponds with which length of pin.**

Step 6



- Separate the main board from the outer case.

To reassemble your device, follow these instructions in reverse order.